

List of Porsche Diagnostic Trouble Codes

DME 5.2.2

P0101 Mass air flow sensor
P0102 Mass air flow sensor
P0103 Mass air flow sensor
P0112 Intake air temperature sensor
P0113 Intake air temperature sensor
P0115 Engine temperature sensor
P0117 Engine temperature sensor
P0118 Engine temperature sensor
P0122 Throttle position sensor
P0123 Throttle position sensor
P0130 Oxygen sensor ahead of catalytic converter
P0131 Oxygen sensor ahead of catalytic converter
P0132 Oxygen sensor ahead of catalytic converter
P0133 Aging of oxygen sensor ahead of catalytic converter
P0134 Oxygen sensor ahead of catalytic converter
P0136 Oxygen sensor after catalytic converter
P0137 Oxygen sensor after catalytic converter
P0138 Oxygen sensor after catalytic converter
P0139 Aging of oxygen sensor after catalytic converter
P0140 Oxygen sensor after catalytic converter
P0150 Oxygen sensor ahead of catalytic converter
P0151 Oxygen sensor ahead of catalytic converter
P0152 Oxygen sensor ahead of catalytic converter
P0153 Aging of oxygen sensor ahead of catalytic converter
P0154 Oxygen sensor ahead of catalytic converter
P0156 Oxygen sensor after catalytic converter
P0157 Oxygen sensor after catalytic converter
P0158 Oxygen sensor after catalytic converter
P0159 Aging of oxygen sensor after catalytic converter
P0160 Oxygen sensor after catalytic converter
P0197 Oil temperature sensor
P0198 Oil temperature sensor
P0300 Misfire damaging to catalytic converter
P0301 Misfire, cylinder 1, damaging to catalytic converter
P0302 Misfire, cylinder 2, damaging to catalytic converter
P0303 Misfire, cylinder 3, damaging to catalytic converter
P0304 Misfire, cylinder 4, damaging to catalytic converter
P0305 Misfire, cylinder 5, damaging to catalytic converter
P0306 Misfire, cylinder 6, damaging to catalytic converter
P0336 Crankshaft position sensor
P0341 Camshaft position sensor 1
P0410 Secondary air injection system
P0420 Catalytic converter conversion
P0430 Catalytic converter conversion
P0440 Fuel Tank Ventilation System – Above Limit
P0441 Fuel Tank Ventilation System – Above Limit
P0442 Fuel tank ventilation system (micro-leak)
P0444 EVAP canister purge valve
P0445 EVAP canister purge valve
P0446 EVAP canister shutoff valve
P0447 EVAP canister shutoff valve
P0448 EVAP canister shutoff valve
P0450 Tank pressure sensor
P0452 Tank pressure sensor
P0453 Tank pressure sensor
P0455 Fuel tank ventilation system (major leak)
P0501 Vehicle speed
P0506 Idle air control



P0507 Idle air control
P0600 CAN timeout
P0603 Control module
P0604 Control module
P0605 Control module
P1102 Oxygen sensor heating
P1105 Oxygen sensor heating
P1107 Oxygen sensor heating
P1110 Oxygen sensor heating
P1115 Oxygen sensor heating
P1117 Oxygen sensor heating
P1119 Oxygen sensor heating
P1121 Oxygen sensor heating
P1123 Oxygen sensing system
P1124 Oxygen sensing system
P1125 Oxygen sensing system
P1126 Oxygen sensing system
P1127 Oxygen sensing system
P1128 Oxygen sensing system
P1129 Oxygen sensing system
P1130 Oxygen sensing system
P1140 Load sensing
P1157 Engine compartment temperature sensor
P1158 Engine compartment temperature sensor
P1213 Fuel injector, cylinder 1
P1214 Fuel injector, cylinder 2
P1215 Fuel injector, cylinder 3
P1216 Fuel injector, cylinder 4
P1217 Fuel injector, cylinder 5
P1218 Fuel injector, cylinder 6
P1225 Fuel injector, cylinder 1
P1226 Fuel injector, cylinder 2
P1227 Fuel injector, cylinder 3
P1228 Fuel injector, cylinder 4
P1229 Fuel injector, cylinder 5
P1230 Fuel injector, cylinder 6
P1237 Fuel injector, cylinder 1
P1238 Fuel injector, cylinder 2
P1239 Fuel injector, cylinder 3
P1240 Fuel injector, cylinder 4
P1241 Fuel injector, cylinder 5
P1242 Fuel injector, cylinder 6
P1265 Airbag signal
P1275 Aging of oxygen sensor ahead of catalytic converter
P1276 Aging of oxygen sensor ahead of catalytic converter
P1313 Misfire, cylinder 1, emission relevant
P1314 Misfire, cylinder 2, emission relevant
P1315 Misfire, cylinder 3, emission relevant
P1316 Misfire, cylinder 4, emission relevant
P1317 Misfire, cylinder 5, emission relevant
P1318 Misfire, cylinder 6, emission relevant
P1319 Misfire, emission relevant
P1324 Timing chain out of position, bank 2
P1340 Timing chain out of position, bank 1
P1384 Knock sensor 1
P1385 Knock sensor 2
P1386 Knock control test pulse
P1397 Camshaft position sensor 2
P1411 Secondary air injection system
P1455 A/C compressor control
P1456 A/C compressor control
P1457 A/C compressor control

P1501 Fuel pump relay output stage
P1502 Fuel pump relay output stage
P1510 Idle air control valve
P1512 Intake manifold switchover 1
P1513 Idle air control valve
P1514 Idle air control valve
P1515 Intake manifold switchover 1
P1516 Intake manifold switchover 1
P1524 Camshaft adjustment, bank 2
P1530 Camshaft adjustment, bank 1
P1531 Camshaft adjustment, bank 1
P1539 Camshaft adjustment, bank 2
P1541 Fuel pump relay output stage
P1551 Idle air control valve
P1552 Idle air control valve
P1553 Idle air control valve
P1570 Immobilizer
P1571 Immobilizer
P1585 Misfire with empty fuel tank
P1600 Voltage supply
P1601 Voltage supply
P1602 Voltage supply
P1640 Control module faulty
P1671 Engine compartment purge fan output stage
P1673 Fan output stage
P1689 Control module faulty
P1691 MIL (Check Engine)
P1692 MIL (Check Engine)
P1693 MIL (Check Engine)
P1782 Engine engagement / nominal engine torque

DME 7.2

P0102 Mass air flow sensor
P0103 Mass air flow sensor
P0107 Ambient pressure sensor
P0108 Ambient pressure sensor
P0112 Intake air temperature sensor
P0113 Intake air temperature sensor
P0115 Engine temperature sensor
P0117 Engine temperature sensor
P0118 Engine temperature sensor
P0121 Throttle valve
P0130 Oxygen sensor ahead of TWC, bank 1
P0132 Oxygen sensor ahead of TWC, bank 1
P0133 Aging of oxygen sensor ahead of TWC, bank 1
P0153 Aging of oxygen sensor ahead of TWC, bank 2
P0134 Oxygen sensor ahead of TWC, bank 1
P0136 Oxygen sensor after TWC, bank 1
P0138 Oxygen sensor after TWC, bank 1
P0139 Aging of oxygen sensor after TWC, bank 1
P0159 Aging of oxygen sensor after TWC, bank 2
P0140 Oxygen sensor after TWC, bank 1
P0150 Oxygen sensor ahead of TWC, bank 2
P0152 Oxygen sensor ahead of TWC, bank 2
P0154 Oxygen sensor ahead of TWC, bank 2
P0156 Oxygen sensor after TWC, bank 2
P0158 Oxygen sensor after TWC, bank 2
P0160 Oxygen sensor after TWC, bank 2
P0197 Oil temperature sensor
P0198 Oil temperature sensor
P0300 Misfire detection
P0301 Misfire, cylinder 1
P0302 Misfire, cylinder 2
P0303 Misfire, cylinder 3
P0304 Misfire, cylinder 4
P0305 Misfire, cylinder 5
P0306 Misfire, cylinder 6
P0327 Knock sensor 1
P0332 Knock sensor 2
P0336 Engine speed sensor signal
P0341 Camshaft position sensor 1
P0342 Camshaft position sensor 1
P0343 Camshaft position sensor 1
P0410 Secondary air injection system, bank 1
P1411 Secondary air injection system, bank 2
P0413 Electric change-over valve
P0414 Electric change-over valve
P0418 Secondary air injection pump
P0420 TWC conversion, bank 1
P0430 TWC conversion, bank 2
P0440 Fuel tank ventilation system
P0442 Fuel tank ventilation system (micro-leak)
P0444 EVAP canister purge valve
P0445 EVAP canister purge valve
P0446 EVAP canister shutoff valve (function)
P0447 EVAP canister shutoff valve (output stage)
P0448 EVAP canister shutoff valve (output stage)
P0450 Tank pressure sensor
P0452 Tank pressure sensor
P0453 Tank pressure sensor
P0455 Fuel tank ventilation system (major leak)
P0480 Fan output stage 1

P0482 Fan output stage 2
P0501 Vehicle speed
P0506 Idle air control
P0507 Idle air control
P0560 Voltage supply
P0562 Voltage supply
P0563 Voltage supply
P0600 CAN timeout, Tiptronic
P0604 Control module
P0605 Control module
P1671 Control module faulty
P0650 MIL (Check Engine)
P1115 Heating of oxygen sensor ahead of TWC, bank 1
P1119 Heating of oxygen sensor ahead of TWC, bank 2
P1117 Oxygen sensor heating after TWC, bank 1
P1118 Oxygen sensor heating after TWC, bank 2
P1121 Throttle position sensor 1
P1122 Throttle position sensor 2
P1124 Fuel pump relay output stage
P1125 Oxygen sensing adaptation, upper load range, bank 1- Above Limit
P1132 Oxygen sensing adaptation, upper load range, bank 2- Below Limit
P1126 Oxygen sensing adaptation, lower load range, bank 1- Below Limit
P1133 Oxygen sensing adaptation, lower load range, bank 2- Below Limit
P1127 Oxygen sensing error by means of short test, bank 1- Below Limit
P1134 Oxygen sensing error by means of short test, bank 2- Below Limit
P1128 Oxygen sensing adaptation, idle range, bank 1- Below Limit
P1130 Oxygen sensing adaptation, idle range, bank 2- Above Limit
P1137 Clutch switch
P1157 Engine compartment temperature
P1158 Engine compartment temperature
P1213 Fuel injector, cylinder 1
P1225 Fuel injector, cylinder 1
P1237 Fuel injector, cylinder 1
P1214 Fuel injector, cylinder 6
P1226 Fuel injector, cylinder 6
P1238 Fuel injector, cylinder 6
P1215 Fuel injector, cylinder 2
P1227 Fuel injector, cylinder 2
P1239 Fuel injector, cylinder 2
P1216 Fuel injector, cylinder 4
P1228 Fuel injector, cylinder 4
P1240 Fuel injector, cylinder 4
P1217 Fuel injector, cylinder 3
P1229 Fuel injector, cylinder 3
P1241 Fuel injector, cylinder 3
P1218 Fuel injector, cylinder 5
P1230 Fuel injector, cylinder 5
P1242 Fuel injector, cylinder 5
P1219 Pedal sensor potentiometer
P1265 Airbag signal
P1266 Fuel cutoff function monitor
P1508 Torque comparison function monitor
P1275 Aging of oxygen sensor ahead of TWC, bank 1
P1276 Aging of oxygen sensor ahead of TWC, bank 2
P1324 Position of camshaft in relation to crankshaft, bank
P1340 Position of camshaft in relation to crankshaft, bank
P1325 Camshaft adjustment, bank 2
P1341 Camshaft adjustment, bank 1
P1384 Knock control zero test
P1385 Knock control offset
P1386 Knock control test pulse
P1397 Camshaft position sensor 2

P1455 A/C compressor control
P1456 A/C compressor control
P1457 A/C compressor control
P1501 Throttle jacking unit, output stage
P1502 Throttle jacking unit, spring test
P1503 Throttle jacking unit, position error
P1504 Throttle jacking unit, emergency air position
P1505 Throttle jacking unit, control range
P1506 Throttle jacking unit, lower mechanical stop
P1507 Throttle jacking unit, gain adjustment
P1509 Torque limiter
P1570 Immobilizer
P1571 Immobilizer
P1574 Stop light switch
P1576 Cruise control standby lamp
P1577 Accelerator pedal potentiometer 1
P1578 Accelerator pedal potentiometer 2
P1579 Crankshaft position signal
P1600 CAN timeout, PSM
P1668 Start enable (output stage)
P1670 Electric change-over valve, variable-length manifold
P1674 Engine compartment purge fan output stage

DME 7.8

P0011 Position of Camshaft in Relation to Crankshaft, Bank 1
P0012 Position of Camshaft in Relation to Crankshaft, Bank 1
P0013 Camshaft Adjustment, Bank 1 Output Stage
P0021 Position of Camshaft in Relation to Crankshaft, Bank 2
P0022 Position of Camshaft in Relation to Crankshaft, Bank 2
P0023 Camshaft Adjustment, Bank 2 Output Stage
P0026 Valve lift control, bank 1 output stage
P0028 Valve lift control, bank 2 output stage
P0030 Oxygen Sensor Heating Ahead of TWC, Bank 1
P0031 Oxygen Sensor Heating Ahead of TWC, Bank 1
P0032 Oxygen Sensor Heating Ahead of TWC, Bank 1
P0036 Oxygen Sensor Heating After TWC, Bank 1
P0037 Oxygen Sensor Heating After TWC, Bank 1
P0038 Oxygen Sensor Heating After TWC, Bank 1
P0045 Charge Pressure Control Valve Output Stage
P0047 Charge Pressure Control Valve Output Stage
P0048 Charge Pressure Control Valve Output Stage - Above Limit
P0050 Oxygen Sensor Heating Ahead of TWC, Bank 2
P0051 Oxygen Sensor Heating Ahead of TWC, Bank 2
P0052 Oxygen Sensor Heating Ahead of TWC, Bank 2
P0056 Oxygen Sensor Heating After TWC, Bank 2
P0057 Oxygen Sensor Heating After TWC, Bank 2
P0058 Oxygen Sensor Heating After TWC, Bank 2
P0071 Ambient Temperature (via CAN from instrument cluster)
P0102 115 Mass air flow sensor
P0103 115 Mass air flow sensor
P0107 299 Ambient Pressure Sensor
P0108 299 Ambient Pressure Sensor
P0112 124 Intake air temperature
P0113 124 Intake air temperature sensor
P0115 123 Engine temperature
P0116 Engine Temperature
P0117 123 Engine temperature
P0118 123 Engine temperature
P0121 117 Throttle valve
P0121 Accelerator Pedal Potentiometer 1
P0122 Accelerator Pedal Potentiometer 1
P0123 Accelerator Pedal Potentiometer 1
P0125 Engine Temperature
P0128 Blocked Thermostat
P0129 Ambient Pressure Sensor
P0130 10 Oxygen Sensor Ahead of TWC, Bank 1
P0131 - 911 Carrera Oxygen sensor ahead of catalytic converter, bank 1
P0132 10 Oxygen Sensor Ahead of TWC, Bank 1
P0133 10 Oxygen Sensor Ahead of TWC, Bank 1
P0134 10 Oxygen Sensor Ahead of TWC, Bank 1
P0135 Oxygen Sensor Heating Ahead of TWC, Bank 1
P0136 12 Oxygen Sensor After TWC, Bank 1
P0137 Oxygen Sensor After TWC, Bank 1
P0138 12 Oxygen Sensor After TWC, Bank 1
P0139 17 Ageing of oxygen sensor after TWC bank 1
P0140 12 Oxygen Sensor After TWC, Bank 1
P0141 373 Oxygen Sensor Heating After TWC, Bank 1
P0150 18 Oxygen Sensor Ahead of TWC, Bank 2
P0151 - 911 Carrera Oxygen sensor ahead of catalytic converter, bank 2
P0152 18 Oxygen Sensor Ahead of TWC, Bank 2
P0153 18 Oxygen Sensor Ahead of TWC, Bank 2
P0154 18 Oxygen Sensor Ahead of TWC, Bank 2
P0155 Oxygen Sensor Heating Ahead
P0156 20 Oxygen Sensor After TWC, Bank 2

P0157 Oxygen Sensor After TWC, Bank 2
P0158 20 Oxygen Sensor After TWC, Bank 2
P0159 Ageing of oxygen sensor after catalytic converter, bank 2
P0160 20 Oxygen Sensor After TWC, Bank 2
P0161 374 Oxygen Sensor Heating After TWC, Bank 2
P0171 Oxygen Sensing Adaptation, Idle Range, Bank 1
P0172 Oxygen Sensing Adaptation, Idle Range, Bank 1
P0174 Oxygen Sensing Adaptation, Idle Range, Bank 2
P0175 Oxygen Sensing Adaptation, Idle Range, Bank 2
P0197 125 Oil temperature sensor
P0198 125 Oil temperature sensor
P0201 Fuel Injector, Cylinder 1
P0202 Fuel Injector, Cylinder 2
P0203 Fuel Injector, Cylinder 3
P0204 Fuel Injector, Cylinder 4
P0205 Fuel Injector, Cylinder 5
P0206 Fuel Injector, Cylinder 6
P0221 Accelerator Pedal Potentiometer 2
P0222 Accelerator Pedal Potentiometer 2
P1578 Accelerator Pedal Potentiometer 2
P0230 Fuel Pump Relay Output Stage
P0234 Boost Pressure Characteristic
P0237 353 Pressure Sensor
P0238 353 Pressure Sensor
P0261 Fuel Injector, Cylinder 1
P0262 Fuel Injector, Cylinder 1
P0264 Fuel Injector, Cylinder 2
P0265 Fuel Injector, Cylinder 2
P0267 Fuel Injector, Cylinder 3
P0268 Fuel Injector, Cylinder 3
P0270 Fuel Injector, Cylinder 4
P0271 Fuel Injector, Cylinder 4
P0273 Fuel Injector, Cylinder 5
P0274 Fuel Injector, Cylinder 5
P0276 Fuel Injector, Cylinder 6
P0277 Fuel Injector, Cylinder 6
P0300 507 Misfire detection (sum total)
P0301 508 Misfire, cylinder 1
P0302 509 Misfire, cylinder 2
P0303 510 Misfire, cylinder 3
P0304 511 Misfire, cylinder 4
P0305 512 Misfire, cylinder 5
P0306 513 Misfire, cylinder 6
P0324 Knock Control Zero Test
P0327 210 Knock sensor 1
P0328 210 Knock sensor 1
P0332 211 Knock sensor 2
P0333 211 Knock sensor 2
P0335 Engine Speed Sensor Signal
P0336 110 Engine Speed Sensor Signal
P0336 Crankshaft Position Sensor, Signal Implausible
P0341 112 Camshaft position sensor 1
P0342 112 Camshaft position sensor 1
P0343 112 Camshaft position sensor 1
P0344 Camshaft position sensor 1
P0346 Camshaft Position Sensor 2
P0347 Camshaft Position Sensor 2 -
P0348 Camshaft Position Sensor 2
P0349 Camshaft position sensor 2
P0410 80 Secondary Air Injection System, Bank 1
P0413 85 Electric change-over valve
P0414 85 Electric change-over valve

P0418 84 Secondary air injection pump
P0420 40 TWC conversion, bank 1
P0430 45 TWC Conversion, Bank 2
P0440 93 Fuel Tank Ventilation System (DTESK)
P0441 93 Fuel Tank Ventilation System
P0442 97 Fuel Tank Ventilation System (Micro-leak)
P0444 98 EVAP canister purge valve
P0445 98 EVAP canister purge valve
P0446 95 EVAP Canister Shutoff Valve (Function)
P0447 96 EVAP canister shutoff valve (output stage)
P0448 96 EVAP canister shutoff valve (output stage)
P0450 99 Tank pressure sensor
P0450 Fuel Tank Ventilation System (Major Leak)
P0451 Tank Pressure Sensor
P0452 99 Tank pressure sensor
P0453 99 Tank pressure sensor
P0455 94 Fuel Tank Ventilation System (Major Leak)
P0456 Fuel Tank Ventilation System (Minor leak)
P0480 494 Fan output stage 1
P0481 495 Fan output stage 2
P0482 591 Fan output stage 3
P0491 Secondary Air Injection System, Bank 1
P0492 Secondary Air Injection System, Bank 2
P0501 120 Vehicle speed
P0506 32 Idle air control at stop
P0507 32 Idle air control at stop
P0513 Immobilizer
P0560 107 Voltage supply
P0562 107 Voltage supply
P0563 107 Voltage supply
P0571 Stop Light Switch
P0600 236 CAN timeout Tiptronic
P0601 DME relay/control module faulty (computer monitoring: reset)
P0603 105 EEPROM Faulty
P0604 406 Control module faulty (RAM)
P0605 405 Control module faulty (ROM)
P0607 Control Module Faulty (Computer Monitoring: Reset)
P0638 Throttle Jacking Unit, Position Error
P0645 A/C Compressor Control
P0646 A/C Compressor Control
P0650 661 MIL Lamp (via CAN)
P0674 A/C Compressor Control
P0700 Tiptronic (CAN transfer box setting implausible) or (Transmission oil temperature above maximum value)
P0701 Tiptronic (Gear implausible/transmission slips)
P0702 Tiptronic (Control unit faulty)
P0706 Tiptronic (Selector lever switch implausible)
P0712 Transmission Oil Temperature
P0713 Transmission Oil Temperature
P0715 Tiptronic (Supply voltage of speed sensors)
P0720 Tiptronic (CAN: wheel speed rear right)
P0730 Tiptronic (Gear comparison negative)
P0740 Tiptronic (Converter lockup clutch)
P0743 Tiptronic (Converter lockup clutch solenoid valve)
P0748 Tiptronic (Control solenoid valve, modulating pressure)
P0753 Tiptronic (Solenoid valve, 1-2/4-5 gearshift)
P0758 Tiptronic (Solenoid valve, 2-3 gearshift)
P0763 Tiptronic (Solenoid valve, 3-4 gearshift)
P0778 Tiptronic (Control solenoid valve, shifting pressure)
P0830 Clutch Switch
P1101 594 Input variables, charge measurement
P1102 Ambient Pressure Sensor

P1105 Oxygen Sensing Adaptation, Upper Load Range, Bank 1
P1106 Oxygen Sensing Adaptation, Upper Load Range, Bank 2
P1107 Oxygen Sensing Adaptation, Lower Load Range, Bank 1
P1108 Oxygen Sensing Adaptation, Lower Load Range, Bank 2
P1109 Input Variables, Charge Measurement
P1110 294 Oxygen Sensors Exchanged Ahead of TWC
P1114 723 Heating LSU, Inertia Fuel Shutoff
P1115 13 Oxygen Sensor Ahead of TWC, Bank 1
P1116 724 Heating LSU Bank 2, Inertia Fuel Shutoff
P1117 14 Oxygen Sensor Heating After TWC, Bank 1
P1118 4 Oxygen Sensor Heating After TWC, Bank 2
P1119 5 Oxygen Sensor Heating Ahead of TWC, Bank 2
P1120 Throttle Valve
P1121 430 Throttle position sensor 1
P1122 431 Throttle position sensor 2
P1124 167 Fuel pump relay output stage
P1125 357 Oxygen Sensing Adaptation, Upper Load Range, Bank 1
P1126 356 Oxygen Sensing Adaptation, Lower Load Range, Bank 1
P1127 418 Oxygen Sensing Error by means of Short Test, Bank 1
P1128 360 Oxygen Sensing Adaptation, Idle Range, Bank 1
P1130 361 Oxygen Sensing Adaptation, Idle Range, Bank 2
P1132 359/357 Oxygen Sensing Adaptation, Upper Load Range
P1133 358 Oxygen Sensing Adaptation, Lower Load Range
P1134 419 Oxygen Sensing Error by means of Short Test, Bank 2
P1136 Pressure Comparison Charge Pressure
P1137 Clutch Switch
P1138 Throttle Position Sensor 1
P1139 Throttle Position Sensor 1
P1140 Throttle Position Sensor 2
P1141 Throttle Position Sensor 2
P1142 Oxygen Sensing Error by means of Short Test
P1143 Oxygen Sensing Error by means of Short Test
P1145 Oxygen Sensor Ahead of TWC, Bank 1
P1146 Oxygen Sensor Ahead of TWC, Bank 1
P1155 Oxygen Sensor Ahead of TWC, Bank 2
P1156 Oxygen Sensor Ahead of TWC, Bank 2
P1157 Engine Compartment Temperature Sensor
P1158 Engine Compartment Temperature Sensor
P1159 Oxygen Sensor After TWC, Bank 1
P1160 Oxygen Sensor After TWC, Bank 2
P1213 150 Fuel Injector, Cylinder 1
P1214 151 Fuel Injector, Cylinder 6
P1215 152 Fuel Injector, Cylinder 2
P1216 153 Fuel Injector, Cylinder 4
P1217 154 Fuel injector, cylinder 3
P1218 155 Fuel Injector, Cylinder 5
P1219 256 Accelerator pedal
P1225 150 Fuel Injector, Cylinder 1
P1226 151 Fuel Injector, Cylinder 6
P1227 152 Fuel injector, cylinder 2
P1228 153 Fuel Injector, Cylinder 4
P1229 154 Fuel injector, cylinder 3
P1230 155 Fuel Injector, Cylinder 5
P1237 150 Fuel Injector, Cylinder 1
P1238 151 Fuel Injector, Cylinder 6
P1239 152 Fuel Injector, Cylinder 2
P1240 153 Fuel Injector, Cylinder 4
P1241 154 Fuel injector, cylinder 3
P1242 155 Fuel Injector, Cylinder 5
P1249 231 Boost Pressure Control Deviation
P1250 Boost Pressure Control Deviation
P1255 230 Boost Pressure Characteristic

P1265 301 Airbag signal
P1266 409 Fuel shutoff function monitor
P1324 325 Position of Camshaft in Relation to Crankshaft, Bank 2
P1325 178 Camshaft Adjustment, Bank 2
P1328 Inlet camshaft output stage
P1331 Inlet camshaft output stage, bank 2
P1340 322 Position of Camshaft in Relation to Crankshaft, Bank 1
P1341 174 Camshaft Adjustment, Bank 1
P1342 189 Camshaft Adjustment, Bank 1 Output Stage
P1343 149 Camshaft Adjustment, Bank 2 Output Stage
P1344 579 Valve Lift Control, Bank 1, Output Stage
P1345 580 Valve Lift Control, Bank 2, Output Stage
P1348 Camshaft Adjustment, Bank 1
P1349 Camshaft Adjustment, Bank 1
P1350 637 Valve lift control checksum error
P1350 - 911 Carrera Valve lift control checksum error
P1351 627 Valve lift control, cylinder 1
P1351 - 911 Carrera Valve lift control, cylinder 1
P1352 628 Valve lift control, cylinder 6
P1352 - 911 Carrera Valve lift control, cylinder 6
P1353 629 Valve lift control, cylinder 2
P1353 - 911 Carrera Valve lift control, cylinder 2
P1354 630 Valve lift control, cylinder 4
P1354 - 911 Carrera Valve lift control, cylinder 4
P1355 631 Valve lift control, cylinder 3
P1355 - 911 Carrera Valve lift control, cylinder 3
P1356 632 Valve lift control, cylinder 5
P1356 - 911 Carrera Valve lift control, cylinder 5
P1357 Camshaft Adjustment, Bank 2
P1358 Camshaft Adjustment, Bank 2
P1359 Valve Lift Control, Cylinder 1
P1359 - 911 Carrera Valve lift control, cylinder 1
P1360 Valve Lift Control, Cylinder 6
P1360 - 911 Carrera Valve lift control, cylinder 6
P1361 Valve Lift Control, Cylinder 2
P1361 - 911 Carrera Valve lift control, cylinder 2
P1362 Valve Lift Control, Cylinder 4
P1362 - 911 Carrera Valve lift control, cylinder 4
P1363 Valve Lift Control, Cylinder 3
P1363 - 911 Carrera Valve lift control, cylinder 3
P1364 Valve Lift Control, Cylinder 5
P1364 - 911 Carrera Valve lift control, cylinder 5
P1371 Valve Lift Control Checksum Error
P1371 - 911 Carrera Valve lift control checksum error
P1374 Valve Lift Control Checksum Error
P1374 - 911 Carrera Valve lift control checksum error
P1384 220 Knock control zero test
P1385 221 Knock control offset
P1386 222 Knock control test pulse
P1397 113 Camshaft position sensor 2
P1411 208 Secondary Air Injection System, Bank 2
P1455 170 A/C compressor control
P1456 170 A/C compressor control
P1457 170 A/C compressor control
P1501 403 Throttle jacking unit, output stage
P1502 412 Throttle jacking unit, spring test
P1503 402 Throttle jacking unit, position error
P1504 410 Throttle jacking unit, emergency air position
P1505 404 Throttle jacking unit, control range
P1506 413 Throttle jacking unit lower mechanical stop
P1507 411 Throttle jacking unit, gain adjustment
P1508 408 Torque comparison function monitor

P1509 429 Torque Limiter
P1510 542 Throttle jacking unit - exchange detection without adaptation
P1511 543 Throttle jacking unit - abortion of test due to negative influence
P1512 76 Ambient Temperature (via CAN from instrument cluster)
P1513 541 Throttle jacking unit, spring test
P1514 540 Throttle jacking unit lower mechanical stop
P1515 Throttle Jacking Unit, Spring Test
P1516 Throttle Jacking Unit, Control Range
P1517 Throttle Jacking Unit, Abortion of Test due to Negative Influence on Ambient Condition
P1518 Throttle Jacking Unit, Control Range
P1546 171 Charge Pressure Control Valve Output Stage
P1547 171 Charge Pressure Control Valve Output Stage
P1548 171 Charge Pressure Control Valve Output Stage
P1570 39 Immobilizer
P1571 39 Immobilizer
P1574 364 Stop light switch
P1575 Pedal Sensor Movement
P1576 662 Cruise Control Standby Lamp via CAN
P1577 427 Accelerator pedal position sensor 1
P1578 428 Accelerator pedal position sensor 2
P1579 111 Crankshaft Position Sensor
P1600 216 CAN timeout PSM
P1601 CAN timeout instrument cluster
P1602 CAN Timeout Instrument Cluster
P1654 Cooling Water Shutoff Valve
P1655 Cooling Water Shutoff Valve
P1656 575 Coolant shutoff valve
P1657 274 Overrun Recirculating Air Valve Output Stage
P1658 Overrun Recirculating Air Valve Output Stage
P1659 Overrun Recirculating Air Valve Output Stage
P1671 DME relay/control module faulty (computer monitoring: reset)
P1674 497 Engine compartment purge fan output stage
P1675 358 Engine Purge Fan Fault
P1676 Engine Compartment Purge Fan Output Stage
P1677 Engine Compartment Purge Fan Output Stage
P1702 Tiptronic (Supply voltage of valves)
P1748 Tiptronic (Control solenoid valve, shifting pressure)
P2088 Inlet camshaft output stage
P2089 Inlet camshaft output stage
P2092 Inlet camshaft output stage, bank 2
P2093 Inlet camshaft output stage, bank 2
P2096 Signal Delay Time for Oxygen Sensor Ageing
P2097 Signal Delay Time for Oxygen Sensor Ageing
P2098 Signal Delay Time for Oxygen Sensor Ageing, Bank 2
P2099 Signal Delay Time for Oxygen Sensor Ageing, Bank 2
P2135 Accelerator Pedal